

GENERAL INSTRUCTIONS FOR PYRAMID TENTS



Find a smooth place and remove stones and branches. Place a piece of plastic under your tent so that your groundsheet remains clean and undamaged.

Place your tent always with its back in the wind, this prevents blowing up of your tent.

Erecting your tent:

First spread the groundsheet and use the tentpins to fasten it.

Now place the frontpoles in the living part of the tent and then the ridge pole (trough tunnel) on top and now tighten them with the extra ropes. See drawing under *.

Place the back poles with the ridge pole on top and the fasteners. Place the raincowls on top. Please put the poles on the ground plates.

Before tightening the “wings” first the two ropes need to be tightened so that your tent comes a little bit forward. Connect the ropes to the rings of the wing.

Now tighten the wings (see drawing for the right order).

Be sure that the zippers are closed and place the ropes as far as possible from the tent.

Now the awning can be put up with the poles and ropes.

For the inner tents: first connect the “walls” to the hooks and the eyes at the bottom. Then connect the tents to the fasteners and put the velcro-tape around the poles.

We wish you lots of pleasure with your ESVO tent.

